LED Exterior Wall Sconce



START FROM HERE


- Make sure POWER is COMPLETELY OFF at the fuse box
- Have your fixture installed by a qualified licensed electrician
- · Prepare everything in a clear area
- Wear gloves at all times during this installation
- · Read instructions carefully before you start assembly
- · Keep this installation sheet for future reference


Technical Support: 1-855-855-8926

- 1. Remove fixture from its original packaging
- 2. Separate the mounting plate (1c) from the canopy (2a) by removing the set screws (2f) with allen key
- 3. Attach mounting plate (1c) to electrical junction box (1a) using junction box screws provided (1e) in hardware package
- 4. Make proper electrical connections (black to hot "L", white to neutral "N", ground to "GND") with wire nuts (1b) provided in hardware package and insert driver (4a) into mounting plate (1c)
- 5. Secure canopy (2a) to mounting plate (1c) with set screws (2f) and allen key
- 6. Rotate fixture head (3a) into desired position

Please Note:

- This Kuzco LED fixture comes with pre-wired LED module(s)
- · Unless instructed, Do Not touch any part of the LED module(s) as any unnecessary contact with the module could cause permanent damage
- For dimming, an ELV (Electronic Low Voltage) or TRIAC type of dimmer is required
- 120V input
- 1. To prevent moisture from entering the electrical junction box (1a) and causing a short, seal around the top and side perimeter between the fixture and the wall surface with weather resistant caulking (Illustration 1). The space at the bottom should be left un-caulked to prevent moisture build up

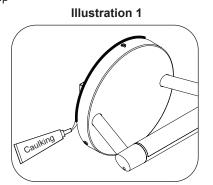

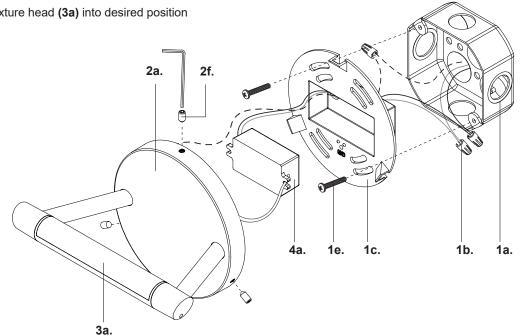

19054 28th Avenue Surrey, BC Canada V3Z 6M3 T: 604 538 7162 TF: 1-855 85 KUZCO F: 604 538 7196 W: kuzcolighting.com 20210309