## **LED Exterior Wall Sconce**

Please Note:

• 120-277V input

• This Kuzco LED fixture comes with pre-wired LED module(s)

contact with the module could cause permanent damage

• Unless instructed, Do Not touch any part of the LED module(s) as any unnecessary

## START FROM HERE

- Make sure **POWER** is **COMPLETELY OFF** at the fuse box
- Have your fixture installed by a qualified licensed electrician
- · Prepare everything in a clear area
- Wear gloves at all times during this installation
- · Read instructions carefully before you start assembly
- · Keep this installation sheet for future reference

**Technical Support:** 1-855-855-8926

- **1.** Remove fixture from its original package.
- 2. Separate mounting plate (1c) from canopy (2a) by removing set screws with allen key (2f).
- **3.** Attach mounting plate (1c) to electrical junction box (1a) using junction box screws provided (1e) in hardware package.
- **4.** Make proper electrical connections (black to hot "L", white to neutral "N", ground to "GND") with wire nuts **(1b)** provided in hardware package.
- **5.** Attach canopy **(2a)** to mounting plate **(1c)** with set screws and allen key **(2f)**.
- **6.** Open fixture flaps (2b) to desired position

To prevent moisture from entering the electrical junction box (1a) and causing a short, seal around the top and side perimeter between the fixture and the wall surface with weather resistant caulking (Illustration 1). The space at the bottom should be left un-caulked to prevent moisture build up.

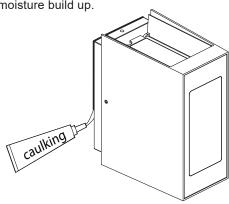


Illustration 1

PRODUCT ID	PART
1c.	XHBRS558-BK
1e.	XHPP832-8
2f.	XHSSM4-12
LED Driver	XDR-LSC9-300-UNV-ND
Allen Key	XHAK-M4

Note: For single gang switch box install only, not intended for Octagon Junction Box. Canopy and backplate for Octagon Junction Box installation sold separately.



