## **LED Exterior Wall Sconce**

## START FROM HERE

- Make sure POWER is COMPLETELY OFF at the fuse box
- Have your fixture installed by a qualified licensed electrician
- · Prepare everything in a clear area
- Wear gloves at all times during this installation
- · Read instructions carefully before you start assembly
- Keep this installation sheet for future reference

**Technical Support:** 1-855-855-8926

- **1.** Remove fixture from its original package.
- 2. Separate fixture body (2a) from backplate (1f) by removing set screws with allan key (2f).
- **3.** Separate the backplate (1f) from the mounting plate (1c) by removing the wing nuts (1g).
- **4.** Attach mounting plate (1c) to electrical junction box (1a) using junction box screws provided (1e) in hardware package.
- **5.** Align mounting plate screws (1d) to desired orientation and then attach backplate (1f) to mounting plate (1c) with wing nuts (1g).
- **6.** Make proper electrical connections (black to hot "L", white to neutral "N", ground to "GND") with wire nuts **(1b)** provided in hardware package.

20200326


Please Note:

- This Kuzco LED fixture comes with pre-wired LED module(s)
- Unless instructed, Do Not touch any part of the LED module(s) as any unnecessary contact with the module could cause permanent damage


- **1.** Attach fixture body (2a) to backplate (1f) with set screws and allan key (2f).
- **8.** To prevent moisture from entering the electrical junction box (1a) and causing a short, seal around the top and side perimeter between the fixture and the wall surface with weather resistant caulking (Illustration 1). The space at the bottom should be left un-caulked to prevent moisture build up.

2a.

2f.

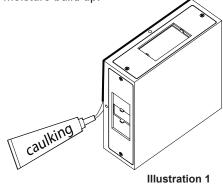

1g.

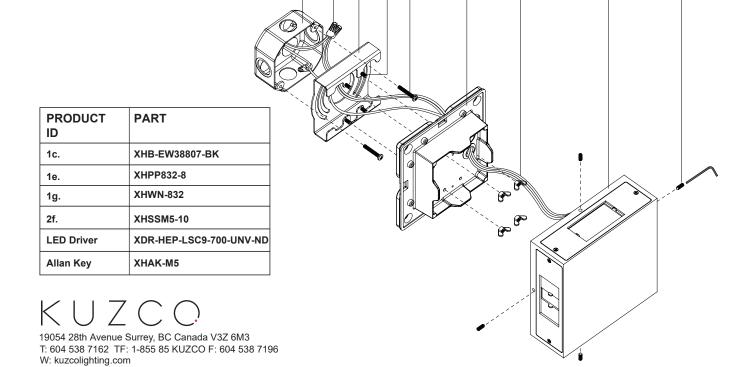

1b. 1c. 1d. 1e.