LED Exterior Wall Sconce



START FROM HERE

- Make sure **POWER** is **COMPLETELY OFF** at the fuse box
- Have your fixture installed by a qualified licensed electrician
- · Prepare everything in a clear area
- · Wear gloves at all time during this installation
- · Read instructions carefully before you start assembly
- Keep this installation sheet for future reference

Technical Support: 1-855-855-8926

Please Note:

- This Kuzco LED fixture comes with pre-wired LED module(s)
- Unless instructed, Do Not touch any part of the LED module(s) as any unnecessary contact with the module could cause permanent damage
- For dimming, an ELV (Electronic Low Voltage) type of dimmer is required
- 120V input

- 1. Remove fixture from its original package
- 2. Separate mounting plate (1c) from fixture (2a) by removing fixture screws (2b)
- **3.** Attach mounting plate **(1c)** to electrical junction box **(1a)** using junction box screws provided **(1e)** in hardware package
- **4.** Make proper electrical connections (**black** to **hot** "L", **white** to **neutral** "N", **ground** to "**GND**") with wire nuts (**1b**) provided in hardware package
- **5.** Attach fixture (2a) to mounting plate (1c) with fixture screws (2b)
- **6.** To prevent moisture from entering the electrical junction box (1a) and causing a short, seal around the top and side perimeter between the fixture and the wall surface with weather resistant caulking (See Illustration 1). The space at the bottom should be left un-caulked to prevent moisture build up





