

# Ceiling LED Pendant

# PD4412-CH-14

INSTALLATION SHEET

## START FROM HERE

- Make sure **POWER** is **COMPLETELY OFF** at the fuse box
- Have your fixture installed by a qualified licensed electrician
- Prepare everything in a clear area
- Wear gloves at all time during this installation
- Read instructions carefully before you start assembly
- Keep this installation sheet for future reference


**Technical Support:** 1-855-855-8926

## Please Note:

- This Kuzco LED fixture come with pre-wired LED module(s).
- Unless instructed to do so, please do not touch any part of the LED module(s) as any unnecessary contact with the module could cause permanent damage.
- For dimming, an ELV (Electronic Low Voltage) type of dimmer is required.
- 120V input

**CAUTION:** EXTREMELY HEAVY FIXTURE, THE JUNCTION BOX NEEDS TO BE REINFORCED BEFORE INSTALLATION. ALL MOUNTING SCREWS MUST SCREW INTO A MINIMUM OF 1" OF WOOD BEHIND THE DRYWALL. DO NOT MOUNT THIS FIXTURE JUST TO DRYWALL. (Be sure all wood that you screwed into, is secured to the cross beams/ceiling joists behind the drywall)

1. Remove the fixture from it's original packaging
2. Remove the backplate (1f) from within the canopy (2a) by removing the decorative nuts (2c)
3. Secure RTN (1j) to mounting plate (1c) with nut and washer (1i)
4. Attach mounting plate (1c) to electrical junction box (1a) with junction box screws provided (1e) in hardware package
5. To change fixture height, push and hold wire gripper (2g), slide wire to desired length and then release wire gripper (2g) to secure (Remove excess wire if necessary)
6. Make proper electrical connections (**black to hot "L"**, **white to neutral "N"**, **ground to "GND"**) with wire nuts (1b) provided in hardware package
7. Secure backplate (1f) to mounting plate (1c) with washer and nut (1k)
8. Secure backplate (1f) to mounting surface with screws (1g) and anchors (1h)
9. Align and insert backplate screws (1d) through holes on canopy (2a), secure with decorative nuts (2c)
10. Align holes on inner glass (3c) with fixture (3a) and secure with screws (3b). Align holes on outer glass (3e) with holes on top of fixture (3a) and secure with the pins (3d) (Illustration 1)

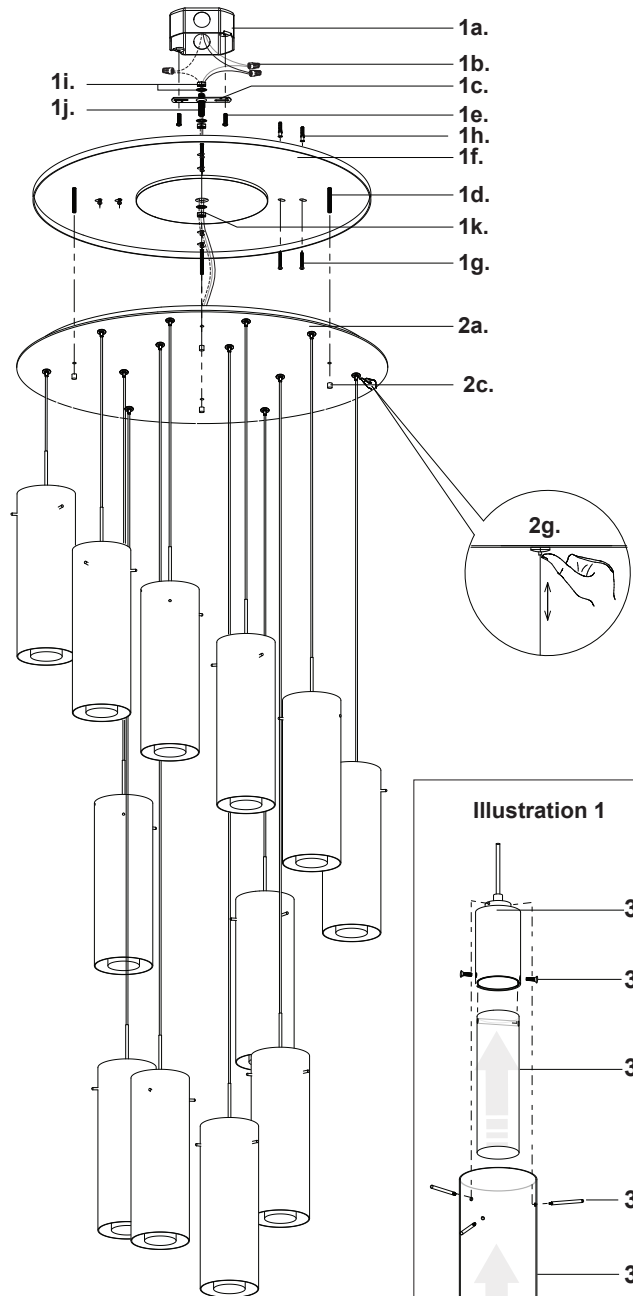

# KUZCO

19054 28th Avenue Surrey, BC Canada V3Z 6M3  
T: 604 538 7162 TF: 1-855 85 KUZCO F: 604 538 7196  
W: kuzcolighting.com  
20220119